

[Home \(/s/\)](#)[TECHNICAL SUPPORT \(/s/contactsupport\)](#)

Caption


[TRAINING \(/s/cpu\)](#)[FORUMS \(/s/forums\)](#)[DEVELOPERS \(/s/developers\)](#)

R2100 Series 5G Ruggedized Router Quick Start Guide

🕒 Feb 1, 2023 · Knowledge

Content

R2100 Series 5G Ruggedized Router Quick Start Guide

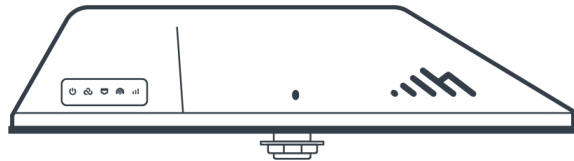

Introduction

This document provides a brief overview of the R2100 Series 5G Ruggedized Router, discusses what is inside the box, and provides basic setup and install instructions.

Note: The Verify app includes many of the same instructions with an alternate order. This document supports the Verify app instructions. Use the Navigation section below to locate the topics most applicable to troubleshooting your setup issues. For additional setup support, contact a professional installer or refer to our [Contact Us](https://cradlepoint.com/about-us/contact-us/) (<https://cradlepoint.com/about-us/contact-us/>) page.

Intended Audience

This article is intended for professional networking hardware installers. It provides basic knowledge and should be used only as a reference guide for installing the router. Due to the unique nature of each installation, potential for RF exposure, and enhanced separation requirements, customers must have a professional install their 5G hardware. This article is a reference guide and is intended only to provide best practices.

Refer to the [Cradlepoint Product Disclaimer and Limitation of Liability](https://cradlepoint.lightning.force.com/lightning/r/Knowledge__kav/ka93t0000004GJwAAM/view#ProductDisclaimer) (https://cradlepoint.lightning.force.com/lightning/r/Knowledge__kav/ka93t0000004GJwAAM/view#ProductDisclaimer) section for further information.

Navigation

Use the following links to quickly navigate through this document:

[Introduction](#)[Intended Audience](#)[R2100 Series 5G Ruggedized Router models](#)[Before you begin](#)[External device components](#)[Location considerations](#)[SIM card for wireless connectivity](#)[Required tools for setup](#)[Setup](#)[STEP 1: Check box contents](#)[Accessories](#)[STEP 2: Install SIM \(if not pre-installed\)](#)[STEP 3: Mount the router](#)[STEP 4: Connect power](#)

[Power socket pinouts](#)

[STEP 5: Power up the router](#)

[STEP 6: Activate the router in NetCloud Manager](#)

[Understanding LEDs](#)

[Troubleshooting](#)

[Resources](#)

[Terms of Service](#)

[Help and Support](#)

[Cradlepoint Product Disclaimer and Limitation of Liability](#)

[Disclaimer](#)

[Installer Responsibility](#)

[Limitation of Liability](#)

[Professional Installer Network](#)

[Safety and Regulatory Warnings](#)

R2100 Series 5G Ruggedized Router models

This document applies to all of the following products:

R2100 Series	Model number:
CRADLEPOINT R2105 (with Wi-Fi)	S5A237A
CRADLEPOINT R2155 (no Wi-Fi)	S5A237A

IMPORTANT: In the European Union, 5 GHz Wi-Fi use is limited to client mode.

The following accessories are separately available:


Accessory	Description	Part Number
Vehicle Mounting Foam	Helps maintain a seal against uneven or ridged vehicle surfaces.	170905-000
Vehicle Mounting Extension Bolt	Enables vehicle installation on thicker surfaces.	170906-000

For details about installation with the accessories, see the [R2100 Series 5G Ruggedized Router and Optional Accessory Quick Start Guide](https://customer.cradlepoint.com/s/article/R2100-Accessories-Quick-Start-Guide) (<https://customer.cradlepoint.com/s/article/R2100-Accessories-Quick-Start-Guide>).

Before you begin

Read the following before setting up the router.

External device components

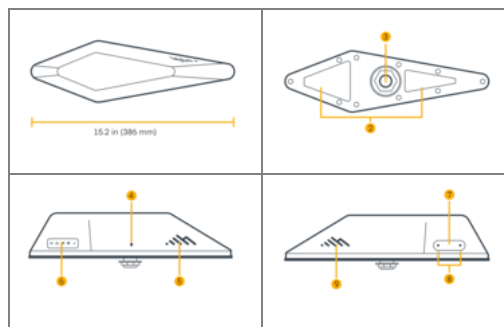

1. Overall length

2. Thermal pads
3. Cable inlet
4. Touch sensor
5. Recessed logo
6. LEDs
7. SIM door
8. SIM door screws
9. Recessed logo

NOTE: The images above do not show the permanently attached Ethernet/PoE (male) and Power (male) cables with which run through the cable inlet.

Location considerations

The following includes best practice considerations for identifying a mounting location:

- Ensure the router is positioned to receive optimal signal. A location on the trunk/boot or roof of the vehicle is recommended.
Note: Cradlepoint recommends selecting a flat section on the exterior of the vehicle to ensure the best adhesion and prevent leaks.
- Avoid installing the device in enclosed spaces.
- Ensure that the heat sink pads are in full contact with the metal of the vehicle exterior to help dissipate heat. Extreme heat or cold can reduce the router's performance.
- Mount in locations compliant with the Safety, Regulatory, and Warranty guide, included in the product shipping box.

SIM card for wireless connectivity

A wireless broadband data plan must be added to the router for wireless broadband connectivity. Network providers must provision a SIM card to provide wireless broadband data plans compatible for use with the router. Contact your network provider for further details.

Required tools for setup

- Security Torx size T8H (for SIM door cover)
- Drill with 22mm (or 15/16") hole saw bit
- Adjustable wrench or 32 mm (1 1/4") box end wrench

Setup

Read through the following to set up the router or use the Verify installation app.

STEP 1: Check box contents

The following should be included in the box:


- R2100 Series 5G Ruggedized Router
- [1] Power cable (permanently attached to router, female)
- [1] Ethernet Cable (permanently attached to router, male)
- [1] GPIO Cable (2x2, 3 meters, 20 AWG)
- [1] Mounting template
- [1] Small accessories kit which includes:
 - [1] Hex nut
 - [1] Tooth lock washer
 - [1] Flat washer
- [1] Safety, Regulatory, and Warranty Guide

Accessories


To enable cellular connectivity, at least one activated 4FF-sized SIM card with an active cellular data plan is needed.

STEP 2: Install SIM (if not pre-installed)

1. Loosen the two Torx security screws until the captive screws and SIM door can be removed.

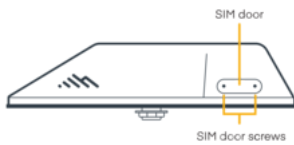

2. Install at least one SIM card, with contacts down and notch facing toward the router.

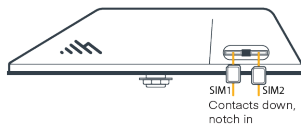


3. Replace door and secure the Torx screws.


STEP 3: Mount the router

The router must be mounted on a relatively flat exterior vehicle surface. Very mildly curved surfaces can be accommodated, if the curve allows the entire adhesive surface of the router to engage, and produces no gaps between the gasket and mount surface.


1. Place the mounting template on the chosen spot on the exterior of the vehicle.
2. Align mounting template in desired location on vehicle making sure device footprint and hole placement are in desired locations with no obstructions (above or below).
3. Tape or otherwise temporarily secure the mounting template to the roof panel.

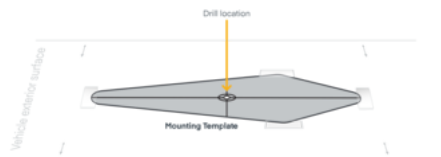


4. Drill the cable routing hole using a "hole saw" bit, 22mm or 15/16" diameter hole saw sizes are recommended. When finished, remove the mounting template.

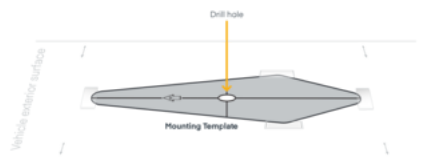

5. Remove both pieces of the adhesive protective liner from the contact surface of the router, and from the two thermal pads.

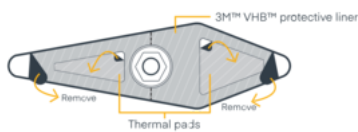

6. Route the cables and cable inlet through the drilled hole, and then place the device in the footprint determined by the mounting template. Do not press the router down yet; let the router rest on the gasket as you determine final placement.

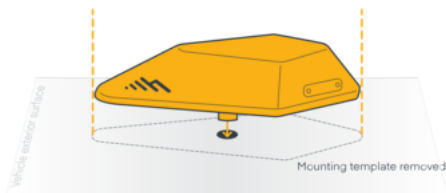

Important: For maximum adhesion, the bonding surfaces must be clean and dry, and free from obstructions that could prevent the two surfaces from sealing together.

7. Make sure device is properly aligned, and then press down firmly and hold the top of the device so that the collar gasket compresses, and the adhesive adheres to the vehicle exterior.

Important: The router contact surface must be as fully engaged with the surface of the vehicle as possible, and the gasket must be compressed, to avoid water seepage. Cradlepoint recommends a 24-hour waiting period at room temperature to achieve 90% bond strength of the adhesive. Colder temperatures may require longer curing times. Bond strength is dependent upon the amount of adhesive-to-surface contact developed. Firm application pressure develops better adhesive contact and helps improve bond strength. Generally, this means that the tape should experience at least 15 psi (100 kPa) in roll down or platen pressure.


8. Install fasteners from the interior of vehicle:

- a. Star lock washer
- b. Flash washer
- c. Hex nut (32 mm or 1 1/4")



STEP 4: Connect power

Connect power depending on the chosen installation:

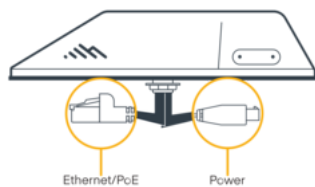


- If using PoE, thread the PoE cable to the PoE source.
- If using a power adapter, thread the power cable to reach the power source.


Power socket pinouts

When creating a custom cable, you can find the proper pinouts below.

Notice: The diagram is shown as looking at the socket on the cable descending from the router, or the back of the connector on the custom cable.


Diagram	Pin	Wire Color	Function
	1	Black	Ground
	2	Red	Power (12VDC)
	3	Orange	Ignition Sense
	4	Blue	N/C

Important: Power must be provided using a fused 3A circuit. In North America, the fuse must be UL listed. Do not directly connect the router to a vehicle battery.

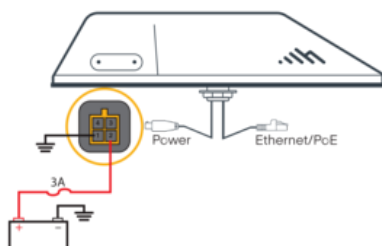

STEP 5: Power up the router


The router powers up automatically once power is supplied to the unit from the source.

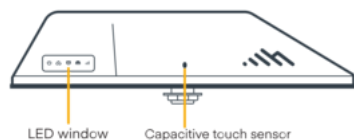







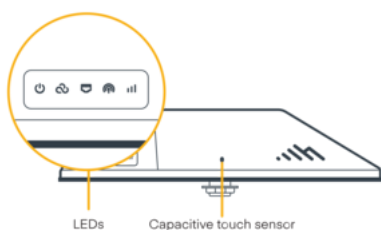


Tap the touch sensitive button to verify the power LED lights up (all LEDs will go dark a few moments after touching the panel).














STEP 6: Activate the router in NetCloud Manager

Activate the router through NetCloud Manager. Device activation requires that you log into your NetCloud Manager account. Refer to [Getting Started with NetCloud Manager](https://customer.cradlepoint.com/s/article/Getting-Started-with-NetCloud-Manager) (<https://customer.cradlepoint.com/s/article/Getting-Started-with-NetCloud-Manager>) for more information.

Understanding LEDs

The router uses LED lights to communicate various status conditions. Use the tables below to verify the status of the router after touching the sensor.

Indicator	Behavior	
	POWER: Detects that the unit has power.	
		No Light = Not receiving power. Check the power source connection.
		Solid White = Powered on.
Indicator	Behavior	
	NCM STATE: Detects that the unit has power.	
		No Light = Unable to connect to NetCloud Manager.
		Solid White = Connected to NetCloud Manager.
Indicator	Behavior	
	ETHERNET CONNECTION: Indicates if the RJ-45 connection has shaken loose.	
		No Light = Not connected.
		Solid White = Connected.

Indicator	Behavior
	EMBEDDED MODEM STATE: Indicates information about the integrated modem.
	 No Light = Modem not detected.
	 Solid Green = Modem has established an active connection.
	 Flashing Green = Modem is connecting
	 Solid Yellow = Data connection error
	 Flashing Yellow = Modem is in the process of resetting
	 Solid Red = Carrier reject
	 Flashing Red = No SIM or SIM door open
Indicator	Behavior
	CELLULAR HEALTH: Indicates the health of the primary cellular modem's signal.
	 No Light = No cellular connection
	 Solid Green = Cellular health is excellent/good
	 Solid Yellow = Cellular health is fair
	 Solid Red = Cellular Health is poor

Troubleshooting

If the device takes longer than five minutes to connect to the Internet, log into the local UI of the device to make configuration changes or to start the troubleshooting process. You must be physically co-located with the device to do this. Refer to [No Internet or Connection Issues](https://customer.cradlepoint.com/s/article/NCOS-No-Internet-or-Connection-Issues) (<https://customer.cradlepoint.com/s/article/NCOS-No-Internet-or-Connection-Issues>) for more information.

Once the device connects to the Internet, it should then connect to your NetCloud Manager account and start its configuration download.

Resources

- [R2100 Series 5G Ruggedized Router Webpage](https://cradlepoint.com/r2100) (<https://cradlepoint.com/r2100>).
- [R2100 Series 5G Ruggedized Router Data Sheet](https://cradlepoint.com/datasheet/r2100-series-5g-ruggedized-router) (<https://cradlepoint.com/datasheet/r2100-series-5g-ruggedized-router>).

Terms of Service

[Terms of Service & License Agreement \(https://cradlepoint.com/about-us/terms-of-service/\)](https://cradlepoint.com/about-us/terms-of-service/)

[Privacy Policy \(https://cradlepoint.com/privacy-policy/\)](https://cradlepoint.com/privacy-policy/)

[GDPR Privacy Policy \(https://cradlepoint.com/about-us/gdpr-privacy-policy/\)](https://cradlepoint.com/about-us/gdpr-privacy-policy/)

Help and Support

[Cradlepoint Connect Customer Community \(https://customer.cradlepoint.com/s/\)](https://customer.cradlepoint.com/s/)

[Cradlepoint Support Services \(https://cradlepoint.com/support/\)](https://cradlepoint.com/support/)

[Contact Us \(https://cradlepoint.com/about-us/contact-us/\)](https://cradlepoint.com/about-us/contact-us/)

Cradlepoint Product Disclaimer and Limitation of Liability

Disclaimer

Cradlepoint, Inc. ("Cradlepoint") does not warrant that the hardware will work properly in all environments or applications, and makes no warranty or representation, either implied or expressed, with respect to the quality, performance, merchantability, or fitness for a particular purpose of the R2100 Series 5G Ruggedized Router/Adapter even when installed in accordance with this installation guide.

This installation guide is provided "AS IS," without any warranty of any kind. Without limiting the foregoing, to the maximum extent permitted by applicable law Cradlepoint expressly disclaims all representations, warranties and conditions, whether express, implied, statutory, or otherwise, with respect to this installation guide, including without limitation any warranty of title, non-infringement, merchantability or fitness for a particular purpose. While Cradlepoint has made every effort to ensure this installation guide is accurate, Cradlepoint disclaims liability for any inaccuracies or omissions that may have occurred and shall not be liable for any adverse results caused, in whole or in part, by the installer's reliance upon the instructions in this installation guide. Information in this installation guide is subject to change without notice and does not represent a commitment on the part of Cradlepoint. Cradlepoint assumes no responsibility for any inaccuracies that may be contained in this installation guide. Cradlepoint makes no commitment to update or keep current the information in this installation guide and reserves the right to make improvements to this installation guide and/or to the products described in this installation guide, at any time without notice.

If you find information in this installation guide that is incorrect, misleading, or incomplete, Cradlepoint would appreciate your comments and suggestions.

Installer Responsibility

Cradlepoint hereby disclaims any liability for failure of the installer to install the hardware properly and for any other acts and omissions of the installer. By using this installation guide, you agree to indemnify and hold Cradlepoint harmless from and against any and all, liabilities, losses, damages, costs and expenses (including without limitation attorneys' fees and costs) incurred by Cradlepoint arising out of or in connection with any installation work that is done other than in accordance with the instructions in this installation guide.

Limitation of Liability

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL CRADLEPOINT BE LIABLE TO YOU OR TO ANYONE CLAIMING THROUGH OR UNDER YOU FOR ANY LOST PROFITS, EQUIPMENT DOWNTIME, OR LOSS OF DATA OR BUSINESS OPPORTUNITY, OR FOR ANY INDIRECT, SPECIAL, EXEMPLARY, INCIDENTAL, CONSEQUENTIAL

OR PUNITIVE DAMAGES, HOWEVER CAUSED AND UNDER ANY THEORY OF LIABILITY, ARISING IN ANY WAY IN CONNECTION WITH YOUR INSTALLATION ACTIVITIES, EVEN IF CRADLEPOINT HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGE. SOME JURISDICTIONS (SUCH AS THE STATE OF NEW JERSEY) DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU. IN NO EVENT SHALL THE AGGREGATE LIABILITY OF CRADLEPOINT AND/OR ITS AFFILIATES ARISING UNDER OR IN CONNECTION WITH THE PRODUCT, HOWEVER ARISING, REGARDLESS OF THE NUMBER OF EVENTS, OCCURRENCES, OR CLAIMS GIVING RISE TO LIABILITY, EXCEED THE PRICE PAID BY THE ORIGINAL PURCHASER OF THE PRODUCT. THE FOREGOING LIMITATIONS WILL APPLY EVEN IF THE ABOVE STATED REMEDY FAILS OF ITS ESSENTIAL PURPOSE.

Professional Installer Network

Email our Professional Installer Network for assistance in locating a professional installer in your service area at installernetwork@cradlepoint.com (<mailto:installernetwork@cradlepoint.com>) (<installernetwork@cradlepoint.com (<mailto:installernetwork@cradlepoint.com>)>).

Safety and Regulatory Warnings

This product is intended to be supplied by a UL Listed Power Supply rated 12 Vdc, minimum 3A.

TitleR2100 Series 5G Ruggedized Router Quick Start Guide

URL NameR2100-Quick-Start-Guide

Was this article helpful?



0



0

Don't see what you're looking for?

[Ask a Question](#)[Contact Support](#)[Cradlepoint Privacy Policy \(https://cradlepoint.com/privacy-policy/\)](https://cradlepoint.com/privacy-policy/)